



ACCESS LATCH

Installation Guide for MagnaLatch Series 2

These instructions are based on the assumption that you have a MagnaLatch installed and operating as per manufacturer's recommendation. The latch will operate properly if installed and maintained in accordance with the manufacturer's instructions.

- Do not use a powered drill with screwdriver bits
- Retain all screws and only replace when advised
- Check the AccessLatch lock for left or right hand opening – see instructions below to change.
- Ensure the MLAK key can only be removed in the locked position.

Keep all of the removed screws for reuse.

1. Remove 2 screws from the Magnalatch Base and retain.
2. Open the gate
3. Remove the Phillips head adjustment screw located between the base and the mounting plate.
4. Slide the base forward and remove. The Series 2 Magnalatch mounting plate does not need to be removed.
5. Replace the 2 screws directly into the mounting plate
6. Place the adjustment screw into the AccessLatch



7. Slide the rear of the AccessLatch onto the front of the Mounting Plate
8. Close the gate and adjust the Access Latch as required

Adapting for Right Hand or Left Hand Gates

Caution

Please exercise caution when exposing the magnet as is extremely powerful and very brittle. Ensure sure it does not attach to anything and take care when refitting.

1. Remove the 2 small Phillips head screws on the side of the AccessLatch.
2. Retain the screws
3. Slide the lock cover from the base of the AccessLatch
4. Slide the lock mechanism from the base.



5. Rotate the lock mechanism 180 degrees and replace into the magnet mount
6. Rotate the lock mechanism 180 degrees again with the magnet facing underneath
7. Replace the lock mechanism into the base
8. The lock mechanism will only fit one way in the base.
9. Refit the cover onto the AccessLatch base
10. Attach the base with the two screws