

Installation of AccessLatch

This latch is designed only for use on safety gates and is not designed as a Security Lock.

For use with D&D Technologies products only. Refer link: [Latches & Locks - D&D Technologies AU \(ddtech.com\)](http://ddtech.com).

Install all MagnaLatch parts and check operation prior to installing AccessLatch


READ THE INSTRUCTIONS PROVIDED WITH THE MAGNALATCH FIRST.

Steps for replacing MagnaLatch Base with AccessLatch

These instructions are based on the assumption that you have a MagnaLatch installed and operating as per manufacturer's recommendation.

The latch will operate properly if installed and maintained in accordance with the manufacturer's instructions.

- Do not use a powered drill with screwdriver bits
- Retain all screws and only replace when advised
- Check the AccessLatch lock for left or right hand opening – see instructions below to change.
- Ensure the MLAK key can only be removed in the locked position.

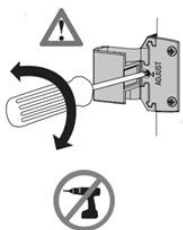


Do not use a power or cordless drill with any part of the AccessLatch.

The AccessLatch now comes with a D&D GateStop™ that must be installed.




Magnalatch Series 2 Instructions (ACCLTCHS2)

No mounting plate required (use existing plate). Retain all screws removed.

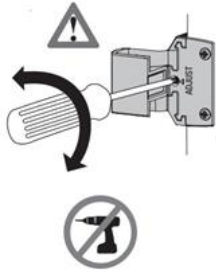


Do not use a power or cordless drill with any part of the AccessLatch.

1. Remove 2 x screws from the Base. Open the gate.
2. Remove the Phillips head adjustment screw located between the base and the mounting plate.
3. The base slides forward and is to be removed. **Keep all the screws.**
*** The Series 2 mounting plate does not need to be removed ***
4. Replace the 2 x screws directly into the mounting plate.
5. Place the adjustment screw into the AccessLatch.
6. Slide the rear of the AccessLatch onto the front of the Mounting Plate:

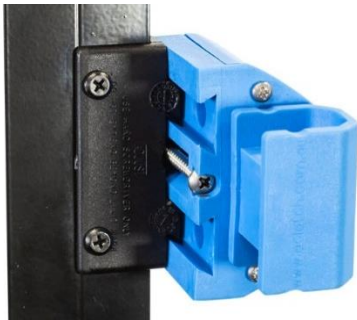



7. Screw the AccessLatch into position on the mounting plate until flush with the end:

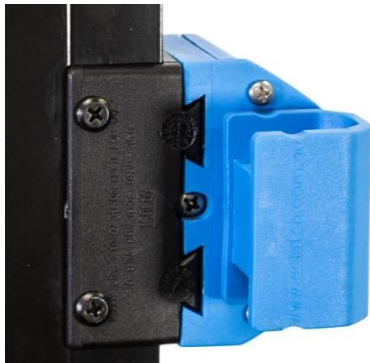

8. Close the gate and adjust the Access Latch as required.

MagnaLatch Series 3 Instructions (ACCLTCHS3)

Both Mounting Plate (provided) and Adjustment Screw are required (provided).

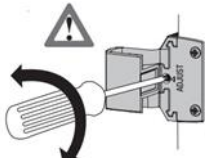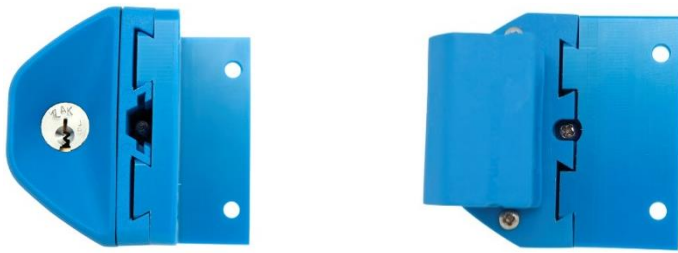

Do not use a power or cordless drill with any part of the AccessLatch.



1. Open the gate.
2. Remove the Phillips head adjustment screw located between the base and the mounting plate.
3. The base slides backwards and is to be removed. Remove the base from the mounting plate.
Keep all the screws.


*** The Series 3 mounting plate needs to be removed and replaced ***



4. Remove the 6 screws attaching the mounting plate to the gate frame. **Keep all screws.**
5. Attach the new mounting plate to the gate frame using the same 6 screws.
Do not overtighten.



6. Attach the AccessLatch to the new mounting plate using the **new screw** provided. The mount provided for the Series 3 (blue) comes with a **screw** that is used to attach the latch to the mount - not to be confused with the existing screws used to attach the mount to the gate.
7. Place the screw into the AccessLatch.
8. Slide the rear of the AccessLatch onto the front of the mounting plate.

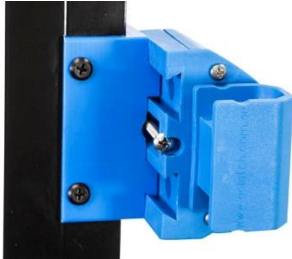

9. Screw the AccessLatch into position on the mounting plate until flush with the end.



10. Close the gate and adjust the Access Latch as required.

Additional Notes & Recommendations

This AccessLatch is designed only for use on safety gates and is not designed as a Security Lock.

Do not use a power or cordless drill when installing any part of the AccessLatch.

Replace old hinges with new hinges on existing gates.

Use D&D Technologies Hinges¹

Ensure all spacings are correct as per manufacturer's instructions.

Use a D&D GateStop™ to reduce wear and tear on the AccessLatch*

MLAK keys are not provided and can be purchased from a [Master Locksmith](#).

**** TAKE PHOTOS OF YOUR INSTALLED PRODUCTS AS PROOF OF CORRECT INSTALLATION ****

¹ - [D&D Technologies - World's most trusted gate hardware](#)

- [Gate Hinges - D&D Technologies AU](#)

- [Gate Accessories - D&D Technologies AU](#)

D&D GateStop™


A GateStop™ has been provided with your AccessLatch to reduce the ‘gate slam’ that may affect the locking mechanism on the AccessLatch.

Note: [These instructions differ slightly to the D&D Website for recommended installation.](#)

Tools Required:

Electric or cordless drill with a 4mm drill bit and a manual #2 Phillips-head screwdriver (use 10-gauge screws) – supplied.

Do not use a screwdriver bit with the electric or cordless drill for the installation of any of these products.

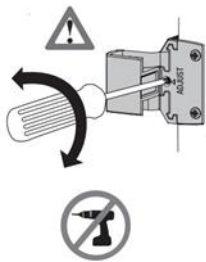

Installation procedures:

1. Determine the position of the GateStop™ on your gate. We recommend mounting the GateStop™ just underneath the AccessLatch.

Note: Do not mount the GateStop™ to the fence post as it may present a tripping hazard.

2. Once the correct position has been determined, mark the all the holes for drilling using the GateStop™ as a template.

3. Remove the GateStop™ and pre-drill using a 4mm drill bit.

4. Mount the GateStop™ with the 10-gauge screws (supplied) using the use the #2 Phillips head screwdriver.

**** Do not overtighten the screws to ensure a strong hold and reliable operation ****

5. Your GateStop™ is now ready for use.

***** TAKE PHOTOS OF YOUR INSTALLED PRODUCTS AS PROOF OF CORRECT INSTALLATION *****